


Settings of the Wifi Printer

1. Open the file—“Printer TEST V3.6” in the folder named as “Tools” in the optical disk. Then start Printer software and follow the steps to set the printer. See the picture followed.

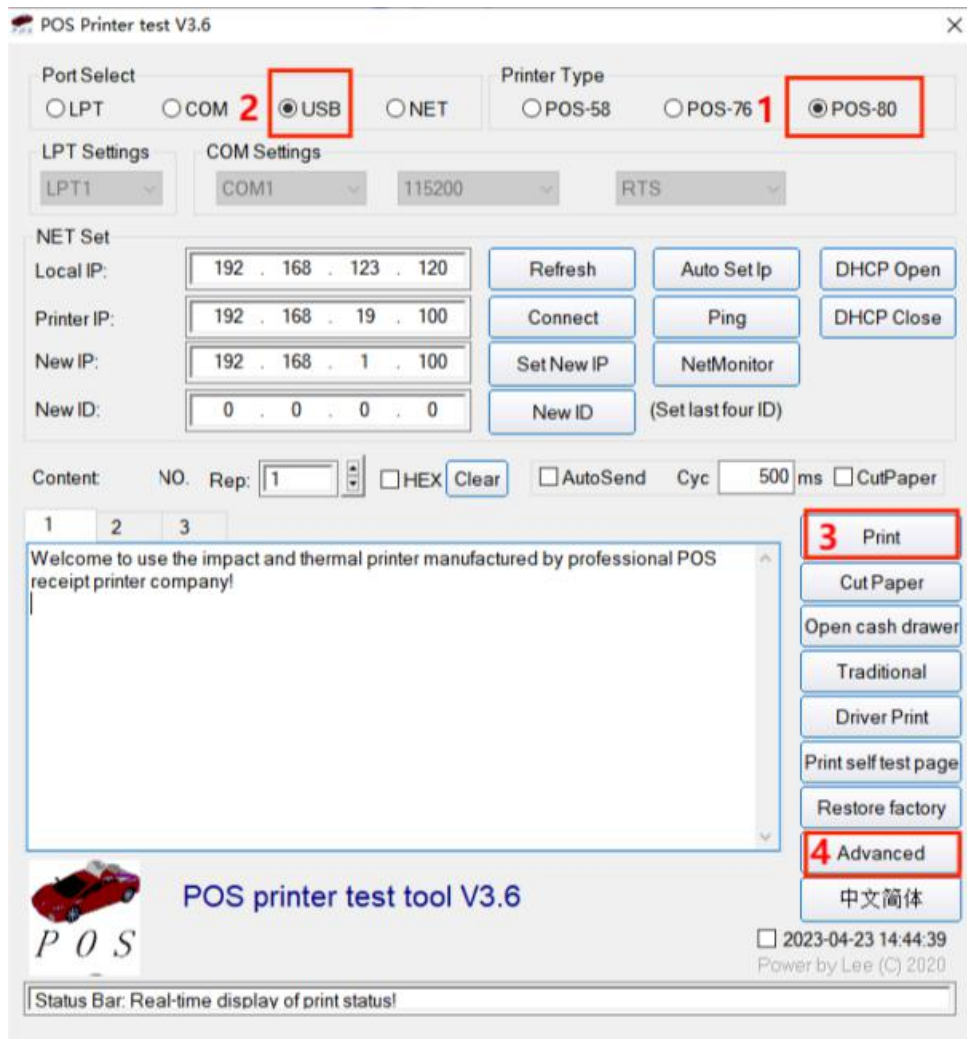

“1” Choose your Printer Model—“POS-80”

“2” Choose “USB Communicative Port “Option

“3” Click the “Print” button to test whether the printer is working.

“4” Via doing the above settings, the printer is tested to be working. Then click the “Advanced” option.

2. Click the “Advanced” . Then the corresponding window is popped up. See the picture:

The 'Advanced' settings window is displayed with various configuration options. The 'Net Settings' section is highlighted, and the 'Set Net' button is circled in red. Other sections include H Parameter Settings, Code page Settings, NV Logo Test, Barcode Printing test, P76 Buzzer Settings, P76 Density Settings, P80 Black sens, baud rate settings, DIP Settings, 2D Barcode test, USB MODE Settings, and USB port settings. The right side of the window contains settings for Black Mark, File data send, Cut With Beep, Width Settings, Close lid cut paper, Density Settings, Sound and light alarm, Language settings, Replay settings, Queuing settings, InputBox Codepage, and Program upgrade.

3. Click the “Network Settings” options, and follow the steps to set up the Network information. See the following pictures:

The 'Net Settings' window is shown with the following configuration steps indicated by red numbers and boxes:

1. IP Address: 192 . 168 . 3 . 101
2. NetMask: 255 . 255 . 255 . 0
3. GateWay: 192 . 168 . 3 . 1
4. SSID: printer001
5. WIFI Key: 123456789
6. Key Type: WPA2_AES_PSK
7. Set All

Buttons for 'SetIPAddr', 'SetNetMask', 'SetGateWay', 'Set All', 'Return', and 'CMD Set' are also visible. A 'Set above contents' button is present for both the IP and WIFI settings sections.

“1” Set up the Printer’s IP address.

“2” Set up the Subnet Mask.

“3” Set up the Gateway.

“4” WIFI SSID address settings Note: the SSID address is the name of your Wireless Router’s name.

For example, if the address of the current Router (SSID) is: *Pinter001*, then this SSID address should be typed in the tab of “SSID” .

“5” WIFI password settings Note: the password of the Wireless Router

For example, if the WIFI’s current password is: *123456789*, then this password should be typed in the tab of “WIFI password” .

“6” Encryption type of WIFI SSID settings Note: the encryption type of the Wireless Router.

For example, if the encryption type of the Router (SSID) is: WPA_TKIP_AES_PSK, then this information should be selected in the tab of “SSID Encryption type” .

“7” After filling the above information, click the “Setting” option. The printer will “BEEP” . Next, restart the printer.